





Sofar solar 3.3~12KTLX-G3 User Manual

Grid-tied inverter

Hide thumbs

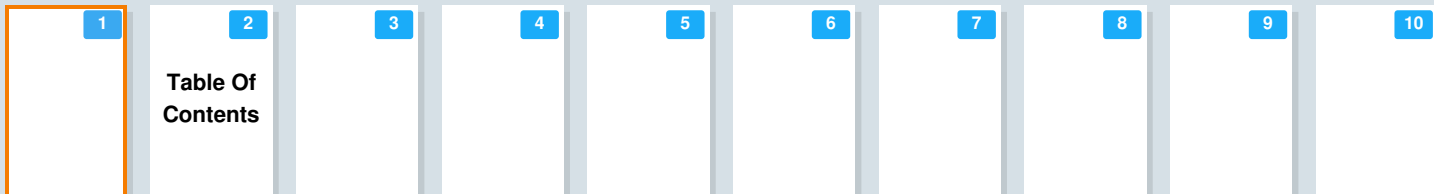

1 / 89 CONTENTS Search in this manual 

ADVERTISEMENT

Download this manual

Previous

Contents

Next

- 1**
- 2
- 3
- 4
- 5

ADVERTISEMENT

[Inverter Sofar solar 3.3KTL-X User Manual](#)

Pv grid-connected inverter (15 pages)

[Inverter Sofar solar HYD 3K~6K-ES User Manual](#)

Energy storage integrated inverter (64 pages)

[Inverter Sofar solar 3KTLM-G3 User Manual](#)

Solar grid-tied inverter (66 pages)

[Inverter Sofar solar 3KTLM-G3 User Manual](#)

Solar grid-tied inverter (79 pages)

[Inverter Sofar solar 3K-6KTLM-G2 User Manual](#)

Solar grid-tied inverter (79 pages)

[Inverter Sofar solar 3K~6KTLM-G2 User Manual](#)

(66 pages)

[Inverter Sofar solar 3.3-12KTL-X User Manual](#)

Solar grid-tied inverter (89 pages)

[Inverter Sofar solar SOFAR 3.3KTLX-G3 User Manual](#)

Solar grid-tied inverter (69 pages)

[Inverter Sofar solar 3.3K-12KTL-X User Manual](#)

Solar grid-tied inverter (83 pages)

[Inverter Sofar solar HYD 3K-EP User Manual](#)

Energy storage integrated inverter (72 pages)

[Inverter Sofar solar HYD 5- 20KTL-3PH Series User Manual](#)

Energy storage integrated inverter (90 pages)

[Inverter Sofar solar ME 3000SP User Manual](#)

Energy storage inverter (60 pages)

[Inverter Sofar solar KTLX-G3 Series User Manual](#)

Solar grid-tied inverter (74 pages)

[Inverter Sofar solar HYD 10K-20KTL-3PH User Manual](#)

Energy storage integrated inverter (74 pages)

[Inverter Sofar solar HYD 3000-EP User Manual](#)

(80 pages)

[Inverter Sofar solar ME-3000SP User Manual](#)

Energy storage inverter (25 pages)

Summary of Contents for Sofar solar 3.3~12KTLX-G3

[Page 1](#)

User manual Solar Grid-tied Inverter Product Model: SOFAR 3.3~12KTLX-G3 S h e n z h e n S O F A R S O L A R C o . , L t d .

[Page 2: Table Of Contents](#)

SOFAR 3.3~12KTLX-G3 User manual Contents PrefaceIV Basic Safety Information.....- 1 - 1.1. Requirement for Installation and Maintenance..... - 1 - 1.2. Symbols and signs.....- 4 - Product Characteristics.....- 7 - 2.1. Intended Use- 7 - 2.2.

[Page 3](#)

Figure 2- 4 Bottom view..... - 9 - Figure 2- 5 Mounting bracket dimensions.....- 9 - Figure 2- 6 Bottom view of the SOFAR 3.3~12KTLX-G3.....- 10 - Figure 2- 7 Product label.....- 10 - Figure 2- 8 Electrical block diagram.....- 12 - Figure 2- 9 Typical efficiency curve (of the 12KW).....- 12 -...

[Page 4](#)

SOFAR 3.3~12KTLX-G3 User manual Figure 4- 14 Use a multimeter to check the positive and negative electrodes- 31 - Figure 4- 15 Removal DC connector.....- 32 - Figure 4- 16 Communications port.....- 32 - Figure 4- 17 Inverter – RRRCR Connection.....- 35 - Figure 4- 18 Inverter –...

manualslib

[Get it on Google Play](#)

Our app is now available on
Google Play

About Us

F.A.Q.

What Our Users Say

Press & Media

Contacts

Advertise with Us

DMCA Policy

Privacy Policy

Cookie Policy

Terms of Use

GDPR Settings

Brands

manualslib.de

manualslib.es

manualslib.fr

Our partner tr-ex.me